



ADJUSTABLE WATER LIMIT KIT

Installation Accessory

A Field Installed Adjustable Water High Limit Control is for use when the factory installed 140°F water high limit thermostat is not satisfactory. The adjustable limit control may be set from 135°F to 175°F.

Instructions

Remove the factory installed water high limit control's blue lead wires from the wiring bundle by cutting the bundle's wire tie and unfasten the wire nuts that connect the blue lead wires into the wiring bundle. Remove the water high limit thermostat from the pipe to which it is fastened by pulling back on the spring clip attached to the thermostat.

Fasten the adjustable limit control to the piping at approximately the same point as the thermostat you just removed. Use the pipe clamp and the hardware provided to wrap around the piping. Tighten hardware for a tight fit to the pipe.

Attach the blue lead wires from the adjustable water limit back into the wiring bundle and reconnect the wire nuts. Retie the wire bundle with a new wire tie provided with the kit.